CHAIN WEAR INDICATOR
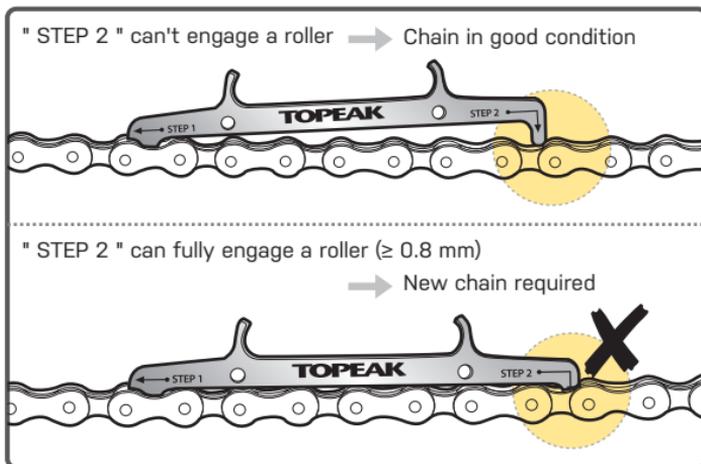
1) Put " STEP 1 " inside chain space and fully engage a roller

2) PRESS " STEP 2 " on a roller

" STEP 2 " can't engage a roller → Chain in good condition

" STEP 2 " can fully engage a roller (≥ 0.8 mm)

→ New chain required

CHAIN HOOK